

Twinco Aircraft ***Must*** Be Pre-heated when Temperatures Fall Below 30 Degrees F.

Pre-Heater Instructions

1. Install flex duct in pilot side cowl opening – leave other cowl plug installed. ***Do Not*** connect flex duct to heater yet!
2. Connect cigarette lighter power cord to car – fan must run. Some cars might require key to be on or in accessory position.
3. Open valve on propane tank.
4. Press down on red button and push igniter. Once burning, ***continue to hold button*** for 20 seconds. Monitor that heater continues to burn without interruption
5. Once heater is running, connect the flex duct and run for the time outlined below.
6. To shut down, ***close the propane tank first*** and continue to run fan until heater is Cool.
7. Disconnect power cord and stow heater in doghouse neatly.

Twinco Aircraft ***Must*** Be Pre-heated when Temperatures Fall Below 30 Degrees F. Take into account overnight lows for early morning activities. Pre-Heat Times are as follows:

Temperature	Minimum Pre-Heat Time
25 to 30 deg F	15 Min. Minimum
15 to 25 deg F	30 Min. Minimum
10 to 15 deg F	45 Min. Minimum